




Assembly and Operation Guide



RECHARGEABLE BATTERY PACK

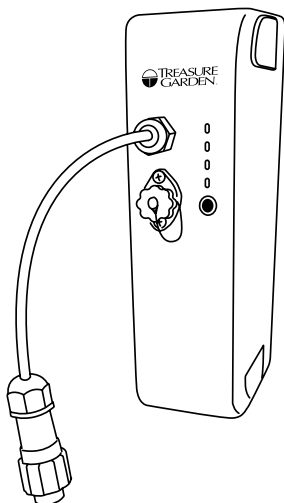

P-AKZPBATTERY
for Starlux AKZ Plus Cantilever

Thank you for purchasing Treasure Garden's Rechargeable Battery Pack for the Starlux AKZ Plus Cantilever.


Please remove all contents from the package, inspect and review checklist.

*Some parts may be included in the styrofoam packaging.
Do not discard any packaging or box until assembly is complete.*

CHECKLIST

A - (1) Starlux AKZ Plus Rechargeable Battery Pack

*Note: Power supply not included. Use power supply included with Starlux AKZ Plus Cantilever.
See page 6 for Safety Precautions.*

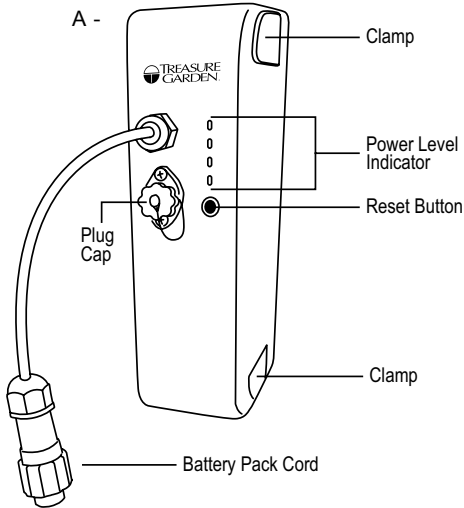


STEP 1

CHARGING RECHARGEABLE BATTERY PACK


You must fully charge battery pack prior to first use.

- a) Remove rechargeable battery pack from all packaging.
- b) Remove plug cap from battery pack (Fig. 1).

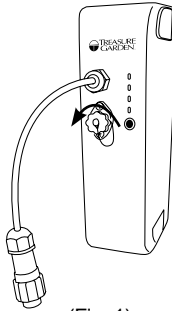

(Fig. 1)

- c) Use power supply (included with Starlux AKZ Plus Cantilever) - line up power supply grooves to plug and insert into plug.
- d) Secure plug by turning locking ring clockwise.
- e) Connect other end of power supply into wall outlet for 6 hours to fully charge (Fig 2).

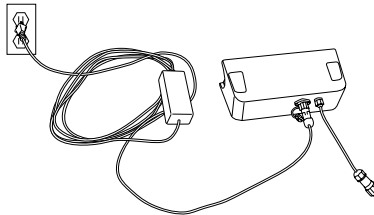


(Fig. 2)

When battery is fully charged, (4) indicator lights will be lit.

NOTE: The power supply output power is 22V 0.9A. It is normal for power supply get warm after long period of use. Avoid sun and water on power supply to increase lifetime use. Be sure not to drop power supply or battery pack. Only use power supply included with Starlux AKZ Plus Cantilever.


STEP 2 ATTACH RECHARGEABLE BATTERY PACK TO FRAME—

- a) Depress both top and bottom clamps on battery pack and attach to lower back side of the cantilever frame. Release clamps to lock into place (Fig. 3).

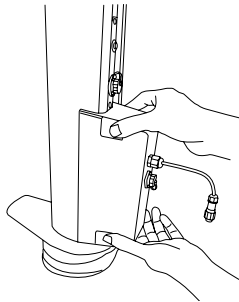

(Fig. 3)

- b) Line up battery pack cord grooves to the plug on the back of the cantilever frame, located below on/off button. Insert cord into plug (Fig. 4).

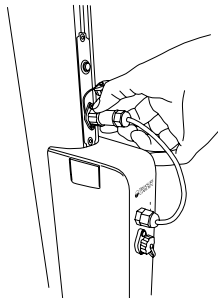

(Fig. 4)


- c) Secure plug by turning ring clockwise.

Your Starlux is now ready for use.

STEP 3 OPERATING LIGHTS

There are two light settings on the Starlux AKZ Plus Cantilever: high and low

- a) Turn on high setting by pressing on/off button once (Fig. 5).

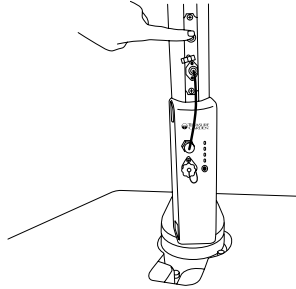


(Fig. 5)

- b) Turn on low setting by pressing on/off button once more.
- c) Turn off lights by pressing on/off button a third time.

WARNING: We do not recommend use of lights while raining. When lights are not in use, it is recommended to unplug battery pack and remove from umbrella. Store battery pack, along with power supply in dry, cool area to keep from damaging.

Battery Status

Lights on the battery pack will indicate battery power level (Fig. 6). Four lights indicates full charge, while one is low battery. When battery is low or empty, you may charge battery pack while attached to frame, or removed from cantilever frame, using supplied Starlux AKZ Plus power supply. See Step 1 "Charging Rechargeable Battery Pack".

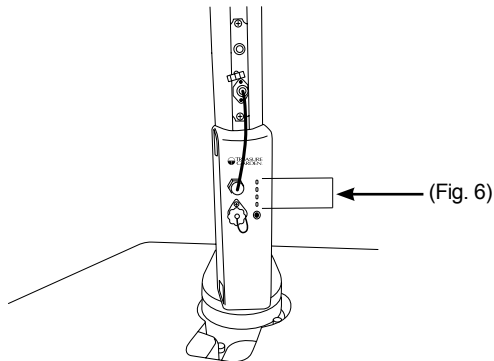


STEP 4

RESET RECHARGEABLE BATTERY PACK


Battery will automatically turn off after 5 minutes if lights are not in use.

- a) To reactivate battery pack, press the reset button once (Fig. 7).

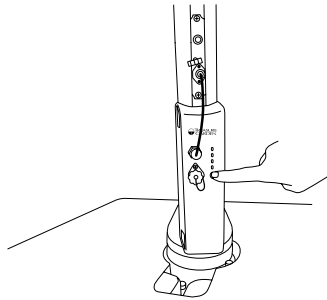

(Fig. 7)

When battery is reactivated, blue indicator light around on/off button will be lit (Fig. 8).

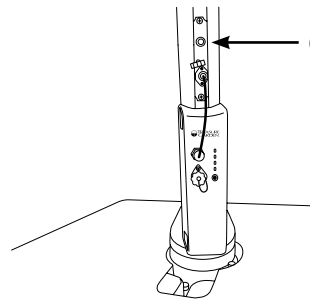


(Fig. 8)

STEP 5

REMOVING RECHARGEABLE BATTERY PACK

- a) Unplug power supply from battery pack.
- b) Unplug battery pack cord from plug on cantilever frame.
- c) Depress both clamps on battery pack and safely remove from cantilever frame (Fig. 9).

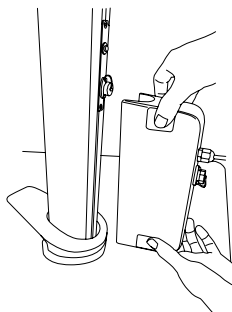

(Fig. 9)

Store battery pack, along with power supply in dry, cool area to keep from damaging.

CARE AND MAINTENANCE

- When not in use, close and cover umbrella with protective cover.
- Store rechargeable battery pack and power supply in dry place.
- Allow a wet canopy to dry while in open position, but do not leave unattended.
- If necessary, clean the fabric with lukewarm water, mild detergent, and a sponge.
- Wipe sliding marks on the aluminum poles with a damp cloth.

Winter Storage:

- Store in a dry place.
- Store battery pack, along with power supply in dry, cool area to keep from damaging.

After the Winter:

- Check the condition and function of the umbrella. Any defects must be repaired by a professional.

SAFETY PRECAUTIONS

- Close and store the umbrella in windy conditions or when a storm approaches. Never allow the umbrella to flap in the wind; this could damage the canopy.
- Do not leave open umbrella unattended. If damage occurs, this is not covered by the warranty.
- When adjusting the umbrella, make sure that no person(s) or item(s) are close to the umbrella. This is important to prevent injury or material damage.
- Do not operate the Starlux power switch or attempt to charge the umbrella in inclement weather (rain, snow) so as to prevent damage to the electrical components.
- When lights are not in use, unplug power supply from umbrella and put the cap back onto the plug to protect the electrical components inside.

Rechargeable Battery Pack and Power Supply:

- Discontinue battery usage if leakage is found. Contact your local authorized dealer for a replacement.
- Do not disassemble rechargeable battery pack.
- Do not leave rechargeable battery pack in sun, it will affect battery life.
- Never use a third party battery or power supply. Doing so may increase risk of fire or explosion. Contact your local authorized dealer for a replacement rechargeable battery pack or power supply.
- During prolonged use, it is normal for the power supply to be warm to the touch. When using power supply, avoid direct sunlight and exposure to moisture.
- Do not attempt to charge the umbrella in inclement weather (rain, snow) so as to prevent damage to the electrical components.

Rechargeable Battery Pack Information

Input: 24VDC 1.5A

Output: 22V 0.9A

Power Supply Information (included with cantilever)

Input voltage: 100~240VAC 50/60Hz 0.9AMax

Output: 24VDC 1.5A

17' Cord

WARRANTY:

Treasure Garden warrants this product (in residential use) to be free from defects in original materials and workmanship for a period of 1 year from the date of purchase. If a defect in the original material or workmanship appears during the warranty period; Treasure Garden will (at its option) repair or replace the product without charge.

Simply contact your original authorized Treasure Garden dealer with a description of the defect. The dealer will verify the defect and work closely with Treasure Garden to obtain the necessary service. In many cases, simple problems can be solved with a replacement part that can be shipped directly to the dealer for professional installation / repair.

In the event that warranted factory service is required, Treasure Garden will assume the responsibility of the return freight

charges on warranted product for the first year only.

Returned product that (upon receipt and inspection) is deemed to be "not covered" under our warranty, will be shipped / billed at your expense.

This warranty gives you specific legal rights, and you may have other rights which vary from state to state.

RUST: Rust is a natural part of the aging process of steel or iron based materials, and is therefore NOT considered a defect.

NOTE: Failure caused by unreasonable or abusive use, or failure caused by neglect of reasonable and necessary care are not covered by this warranty.

Additionally, acts of nature (including but not limited to wind, hurricanes, tornadoes, and storms) are not covered by this warranty.



www.treasuregarden.com

©2020 Treasure Garden, Inc. - All Rights Reserved.
v.05.13.20